


Wasserrohrnetz
Bornheim

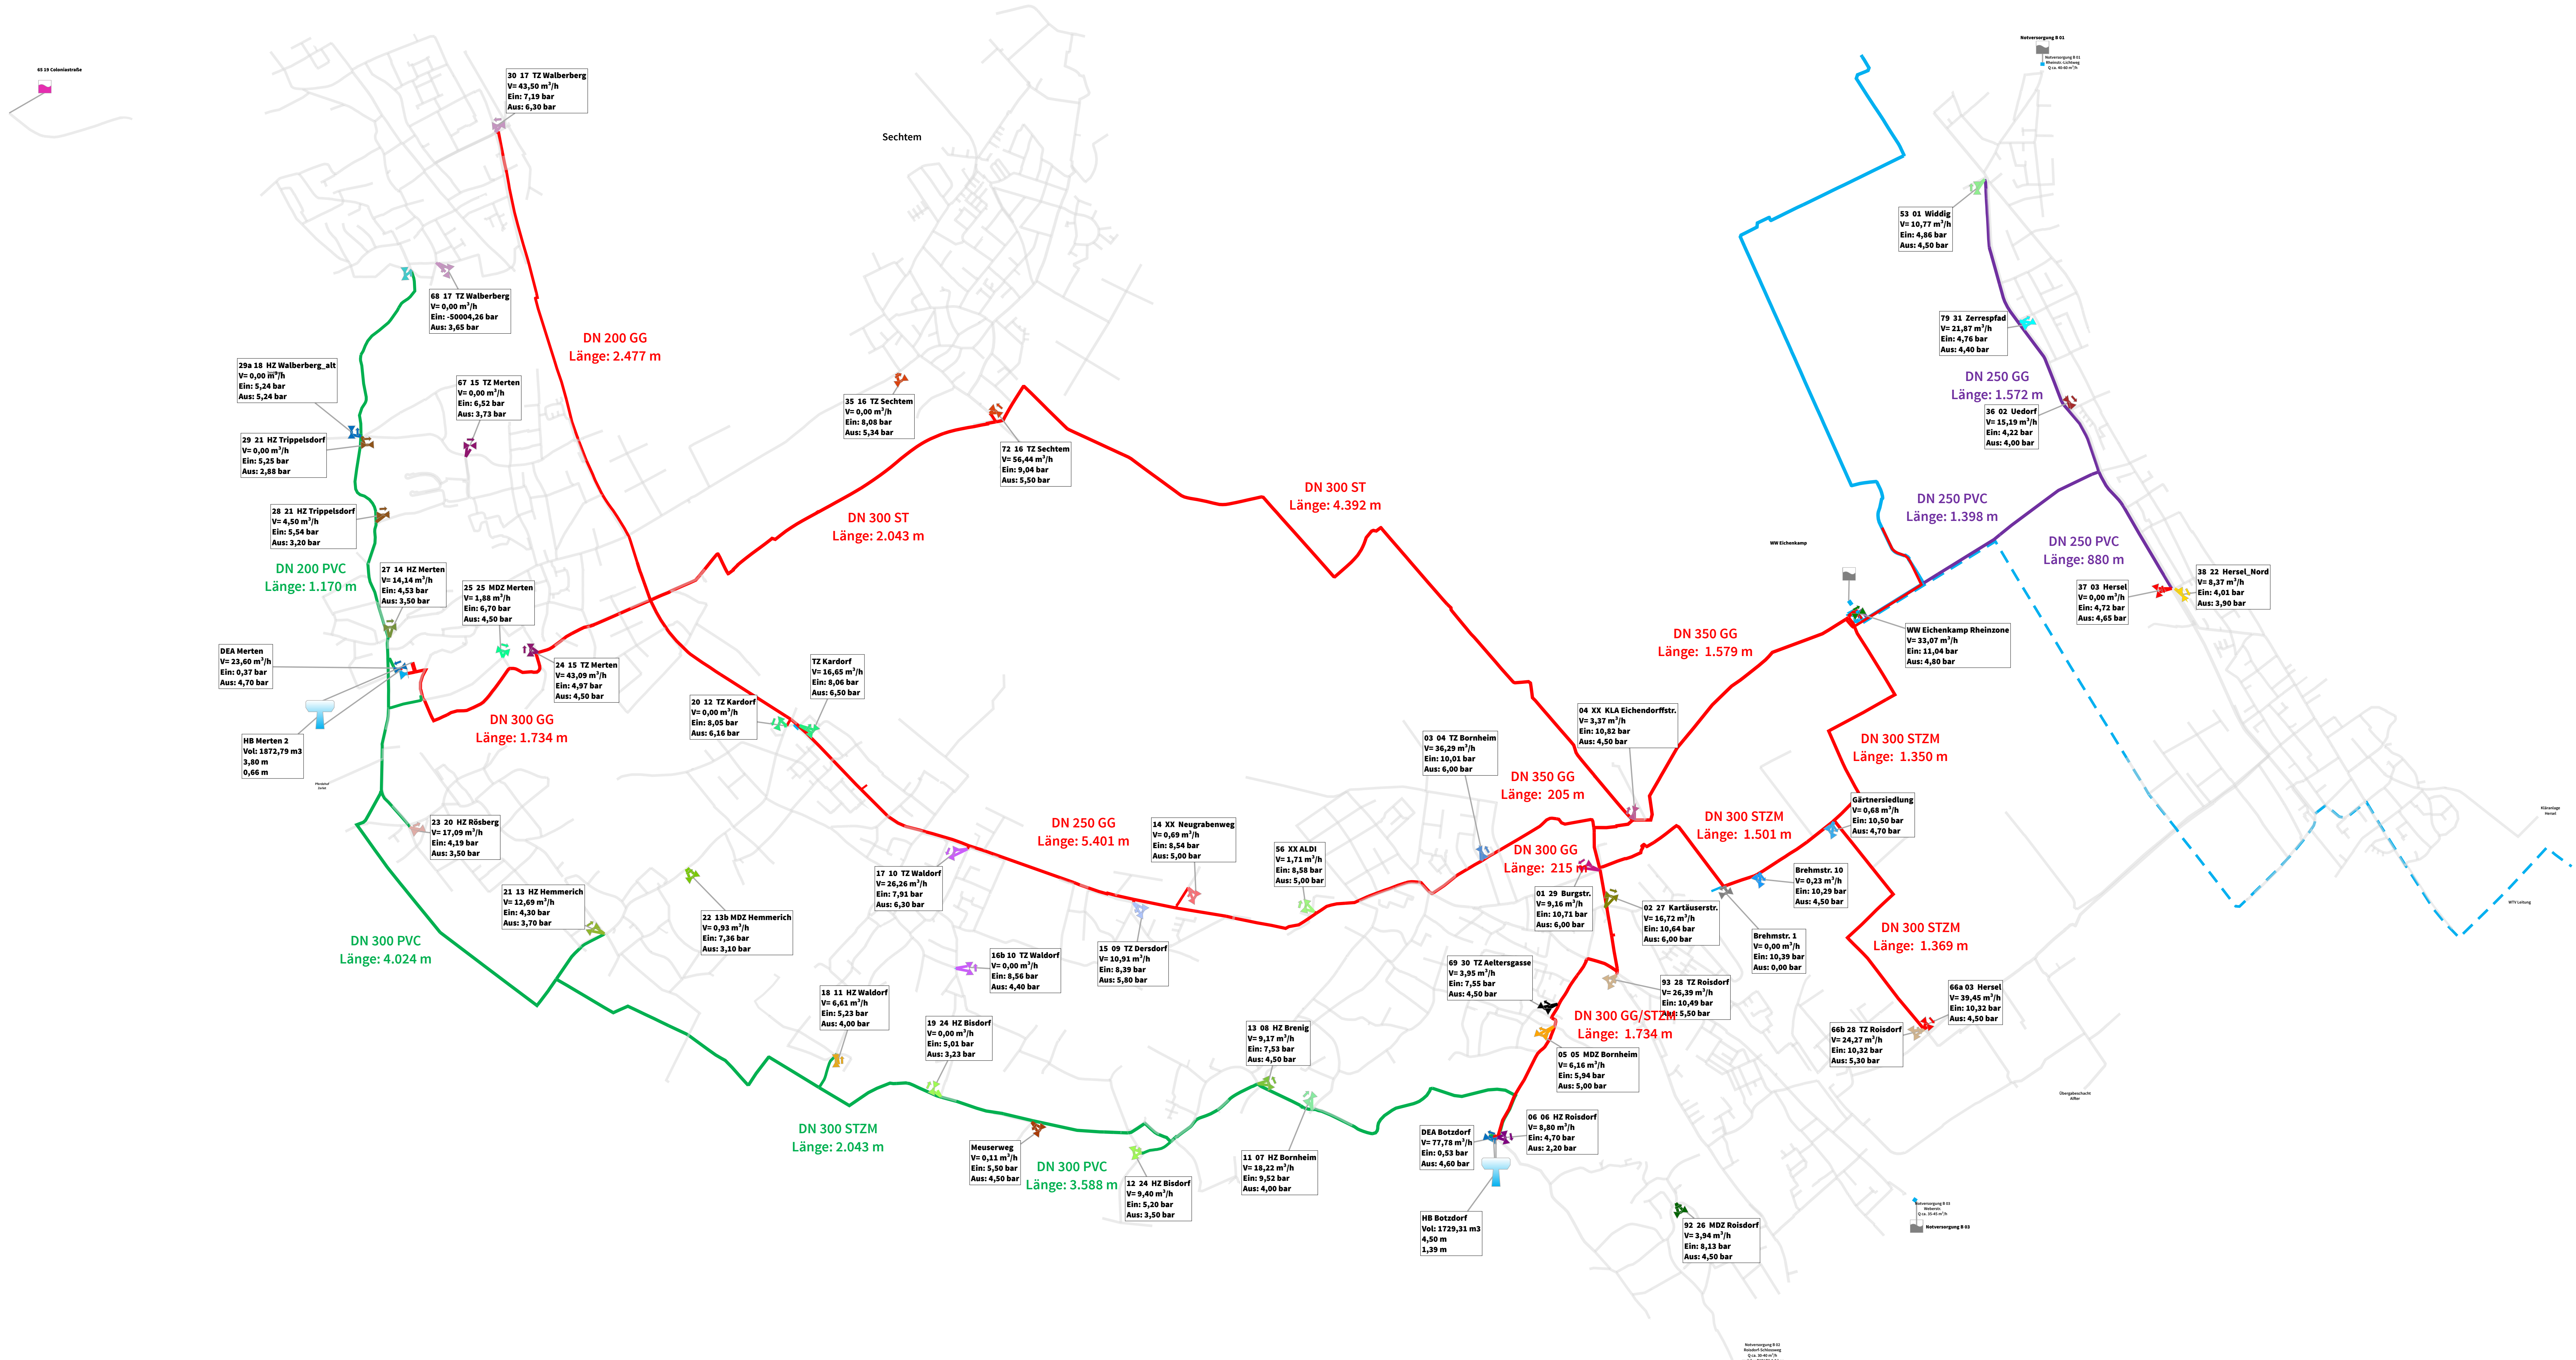

[Leitung]		
[Empostung]	-Name	Na
Na	-Name	Na
[Behälter]		
Na	-Name	Na
Q	-Füllmenge	[m3]
FSm	-Max. Füllstand	[m]
FSmin	-Min. Füllstand	[m]
FSmax	-Max. Füllstand	[m]
FSmin	-Min. Füllstand	[m]

[Übersicht]		
Na	-Name	Na
Q	-Volumenstrom	[m3/h]
FSm	-Max. Füllstand	[m]
FSmin	-Min. Füllstand	[m]